



SET Schalter mit Schuko Zwischenstecker 54176


Kit Switch w/ Schuko outlet plug 54176

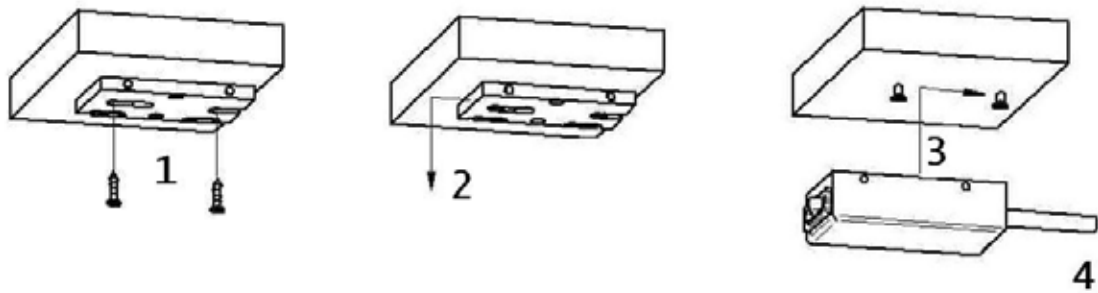

240 V 50 Hz max. 4 Ampere

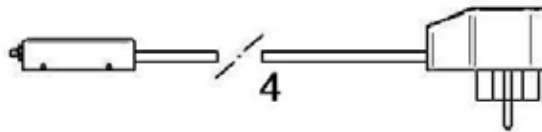

Netzsteckdose/Mainpower 240 V 50 Hz  
system Schuko



**D**

- 1: Kunststoffschaablone anschrauben
- 2: Kunststoffschaablone in Pfeilrichtung abziehen
- 3: Schalter aufsetzen und in Pfeilrichtung bis zum Anschlag schieben
- 4: Anschlussleitung bis zur Schuko-Netzsteckdose 240 V/50 Hz verlegen und Zwischenstecker einstecken

**Reinigungshinweis**

Vor dem Reinigen Netzstecker ziehen, oder Spannungsfrei schalten.  
Um Beschädigungen an der Oberfläche zu vermeiden. Bitte keine Scheuermittel und Putzschwämme verwenden!!  
Verwenden Sie nur für Edelstahl geeignete silikonhaltige Reinigungsmittel!

**GB**

- 1: Screw on plastic template
- 2: Pull off the plastic template in the direction of the arrow.
- 3: Put on the switch and push it in the direction of the arrow as far as it will go.
- 4: switch lead lay to the Schuko Socket ( 240 V/50 Hz ) and outlet plug put in

**Cleaning instructions**

Before cleaning, please disconnect outlet plug or Mainpower  
To avoid damage to the surface. Please do not use any scouring agents or cleaning sponges!!!  
Use only silicone-containing cleaning agents suitable for stainless steel!