


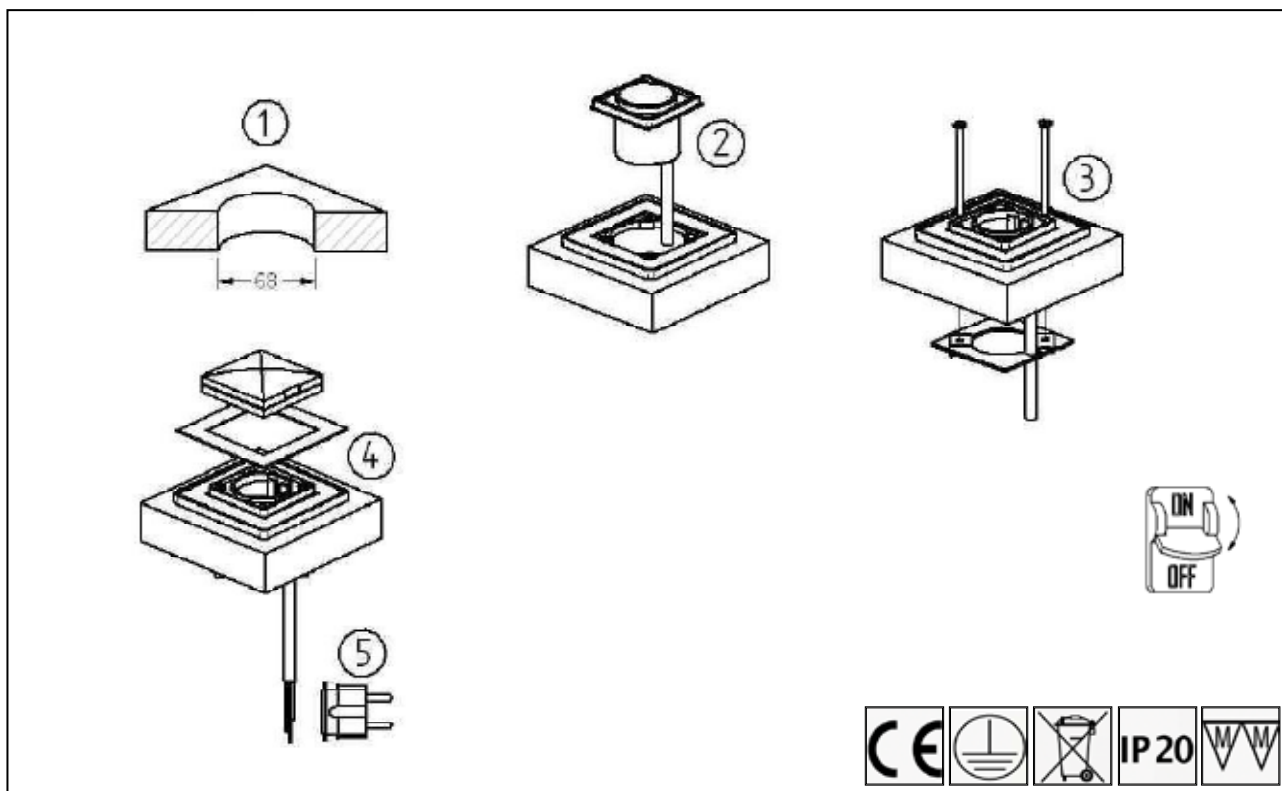

D

Montagefolge:

- 1: Bohrung 68 mm
- 2: Distanzrahmen und Steckdose platzieren
- 3: Mit beiliegenden Befestigungsschrauben und Montageblech anschrauben
- 4: Obere Edelstahlblende einsetzen und Klappdeckel aufklippen
- 5: Netzanschluß 250 Volt/50 Hz herstellen

! Achtung: Alle Montagearbeiten in spannungslosen Zustand durchführen. Bitte beachten Sie die jeweils gültigen VDE Richtlinien. Änderungen an den Elementen oder deren Bauteile sind nicht gestattet

Reinigungshinweis:

Um Beschädigungen an der Oberfläche zu vermeiden, bitte keine Scheuermittel und Putzschwämme verwenden! Verwenden Sie nur für Edelstahl geeignete silikonhaltige Reinigungsmittel!

UK

Assembly sequence

- 1: Drill hole 68 mm
- 2: Place spacer frame and socket
- 3: Screw on with enclosed fastening screws and mounting plate
- 4: Insert upper stainless steel cover and clip on hinged cover clip on
- 5: connect to mains 250 Volt/50 Hz

! Attention: Carry out all assembly work in a de-energized state. Please observe the applicable DIN VDE 0100 guidelines or national rules. Modifications to the elements or their components are not permitted.

Cleaning instructions:

To avoid damage to the surface, please do not use scouring agents and cleaning sponges! Use only silicone-containing cleaning agents suitable for stainless steel!